


首先连接服务器：

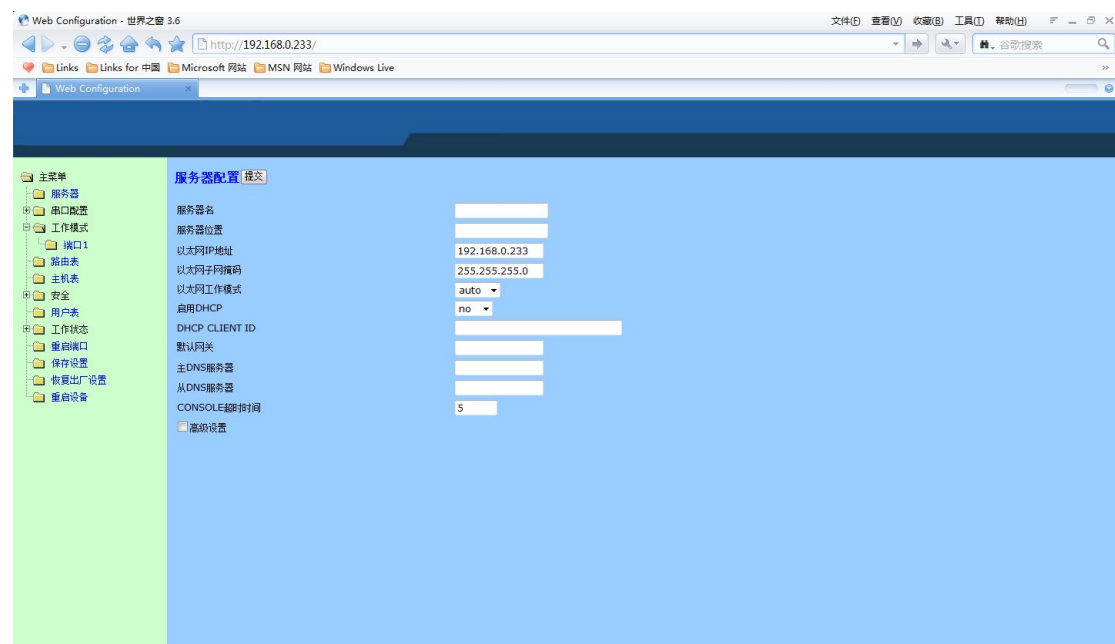


进入工作模式，更改工作模式为 MCP：



点击提交，并保存，重启服务器；

进入虚拟串口软件界面：

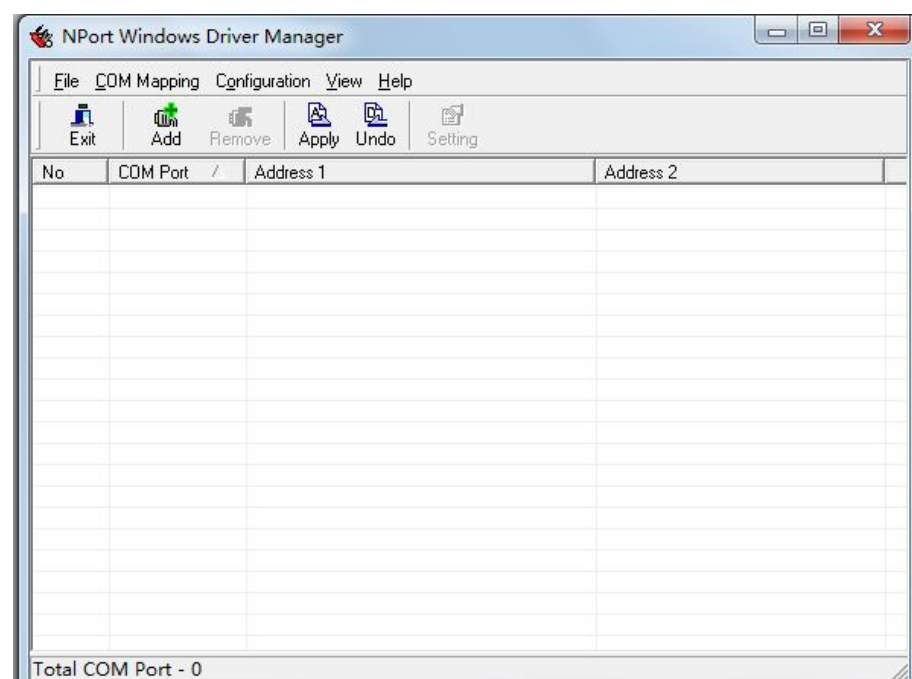

点击 Add,search;

Add NPort

☒ **Select From List**

☐ Mapping IPv6 COM Port

No	Model	MAC 1	Address 1	MAC 2	Address 2
☒ 1	DE-301	00:0E:45:02:69:7E	192.168.0.233	-	-

☐ **Input Manually**

RealCOM | Redundant COM | Reverse RealCOM

NPort IP Address

First Mapping Port

Data Port

Command Port

Total Ports

同坐 input manually 输入搜索到的 IP:

Add NPort

☐ **Select From List**

☐ Mapping IPv6 COM Port

No	Model	MAC 1	Address 1	MAC 2	Address 2
☒ 1	DE-301	00:0E:45:02:69:7E	192.168.0.233	-	-

☒ **Input Manually**

RealCOM | Redundant COM | Reverse RealCOM

NPort IP Address

First Mapping Port


Data Port

Command Port

Total Ports

点击 OK, 选择 Yes, 即可。

如需要更改 IP，可先用 upgrade.exe 搜索 IP，然后更改：

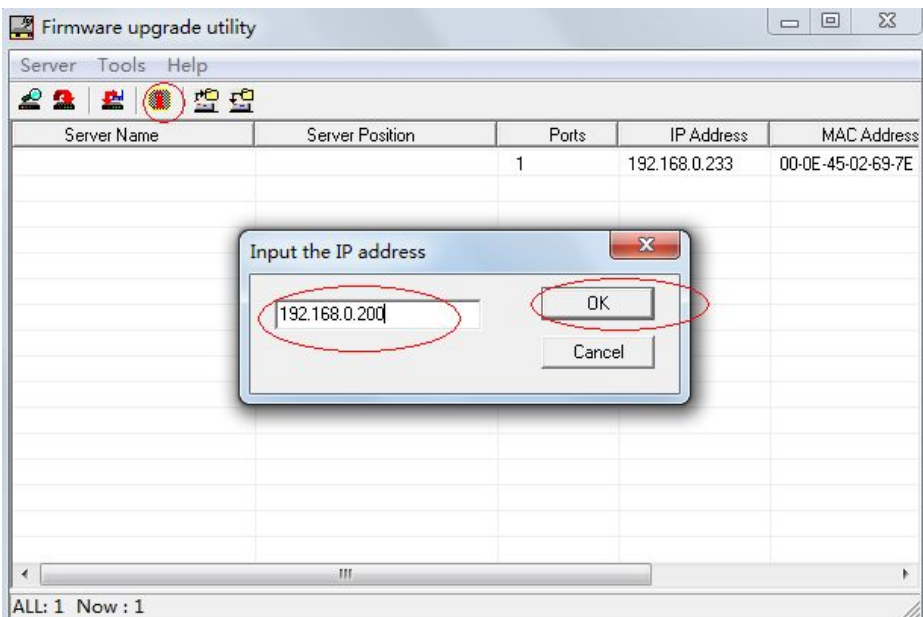

进入服务器的配置界面，更改 IP，提交，保存，并重启。



之后，再进入虚拟串口的软件进行虚拟。

