



1.打开 grade.exe,搜索 IP。

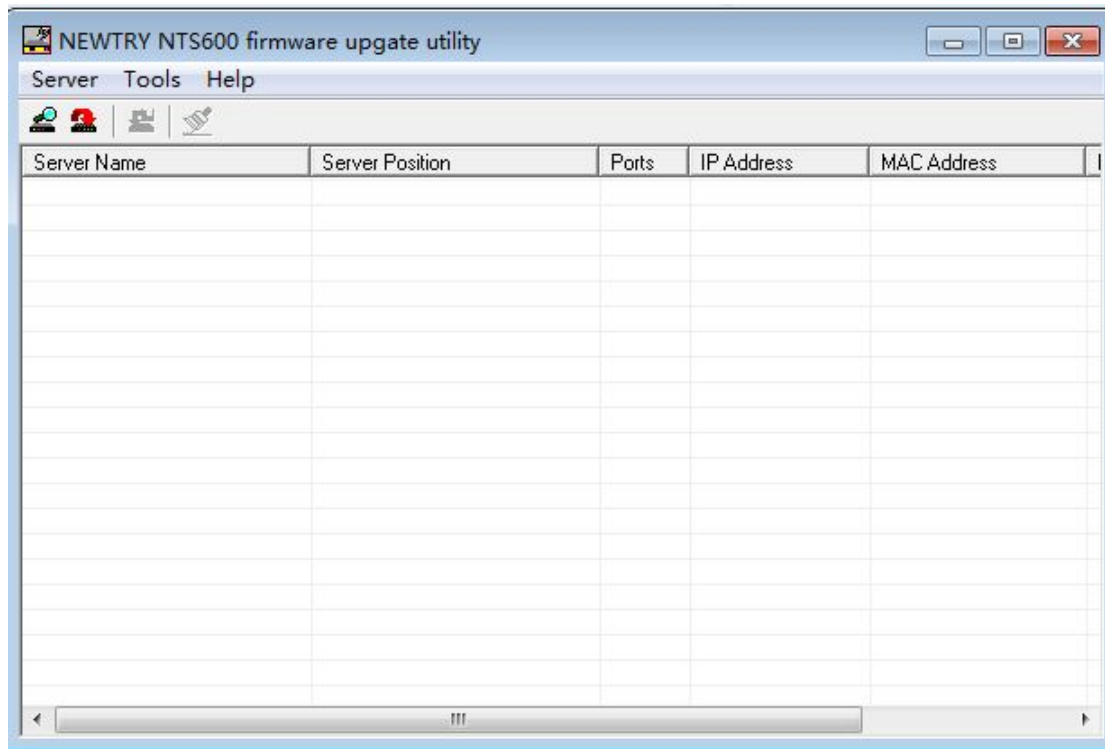

如果要更改 IP，请选中 ，进行 IP 的更改

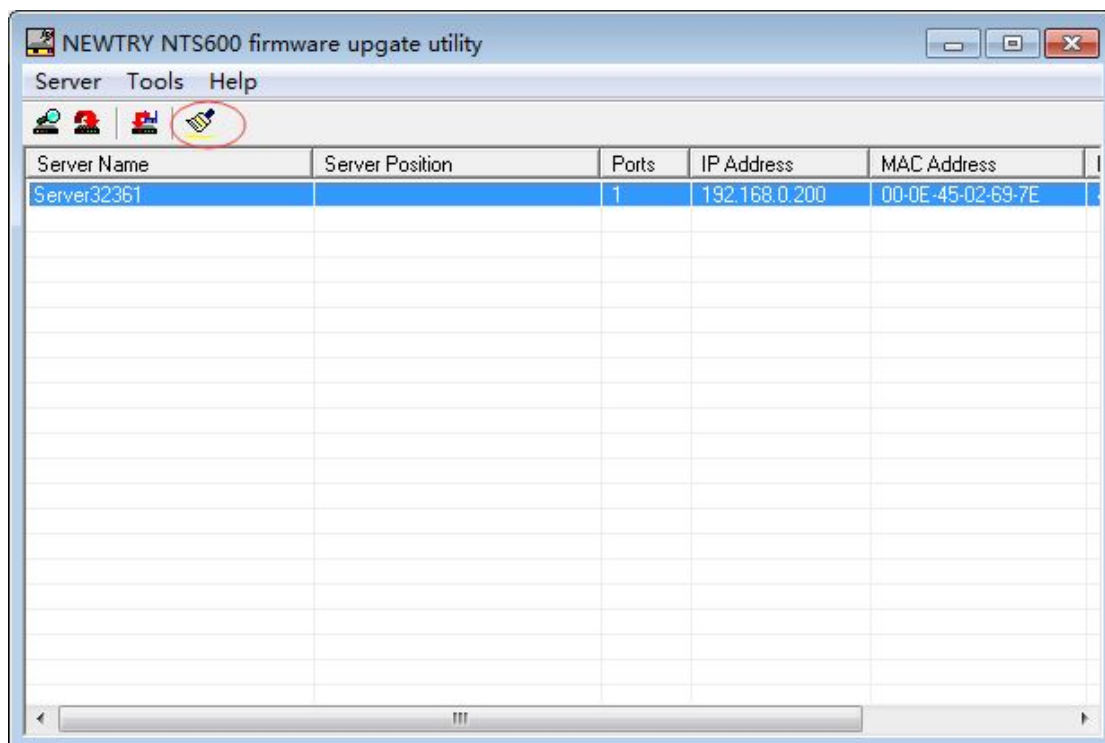

Note: 服务器的配置界面也需要更改。在 web 端，输入更改后的 IP。

Serial port server

Menu

Server

Async

Mode

Route Table

Host Table

Secure

User Table

Stats

Reset Ports

Save Config

Load Factory Settings

Reboot Server

Server parameters

Submit

Server Name

Server32361

Server Position

Ethernet IP Address

192.168.0.200

Ethernet IP Mask

255.255.255.0

Ethernet Mode

auto

DHCP Enable

no

DHCP CLIENT ID

Default Gateway

Primate DNS Server

Second DNS Server

CONSOLE Timeout

5

Advance Settings

点击提交，保存，并重启。

安装 setup4.2.4，在控制棉棒打开安装后的软件

COM port over TCP/IP administrator ver 4.2.4.0

COM Port	Device IP	Port	Report	Alive	Share
COM4					
COM5					
COM6					
COM7					
COM8					
COM9					
COM10					
COM11					
COM12					
COM14					
COM15					
COM16					
COM17					
COM18					



Map

Unmap

Save

Exit

点击需要的串口号，点击 MAP，

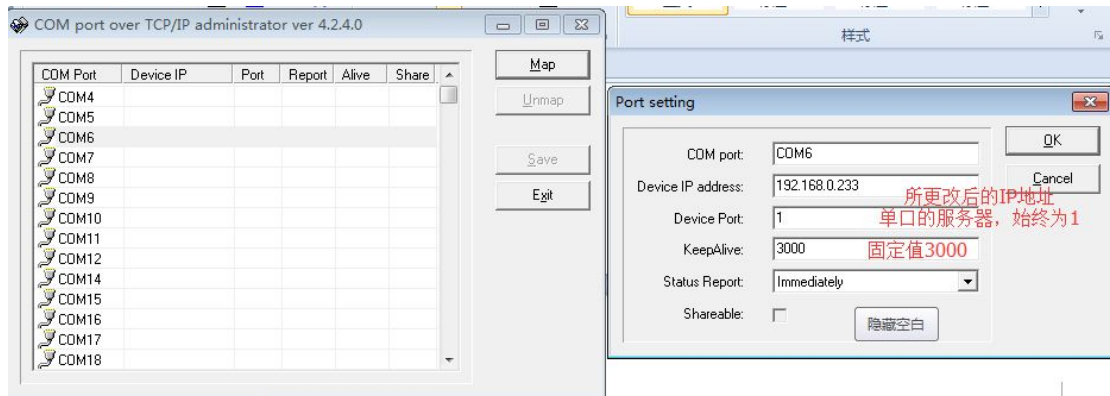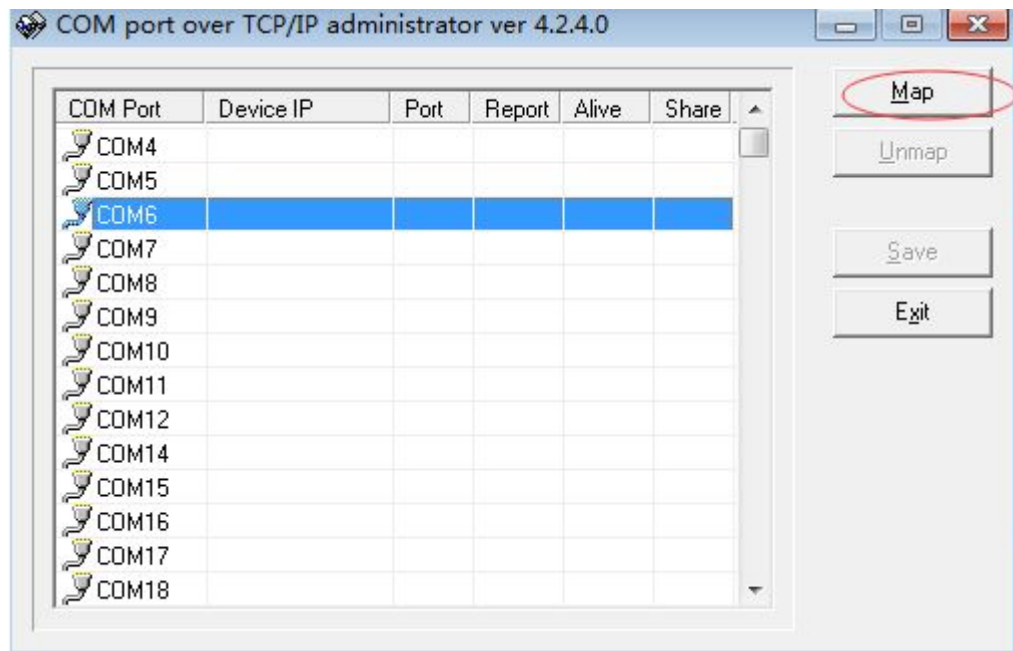

其他参数不需要更改。

之后，请用对应的串口通讯即可